


End Cap Installation Instructions

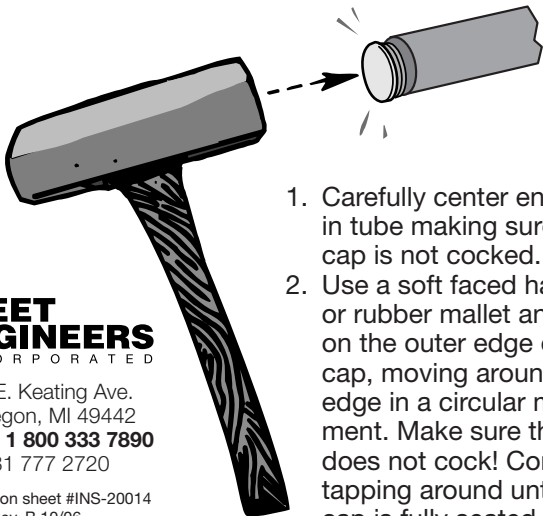

1. Carefully center end cap in tube making sure the cap is not cocked.
2. Use a soft faced hammer or rubber mallet and tap on the outer edge of the cap, moving around the edge in a circular movement. Make sure the cap does not cock! Continue tapping around until the cap is fully seated.

FLEET
ENGINEERS
INCORPORATED

1800 E. Keating Ave.
Muskegon, MI 49442
Phone **1 800 333 7890**
Fax 231 777 2720

Installation sheet #INS-20014
8/00 • Rev. B 10/06